


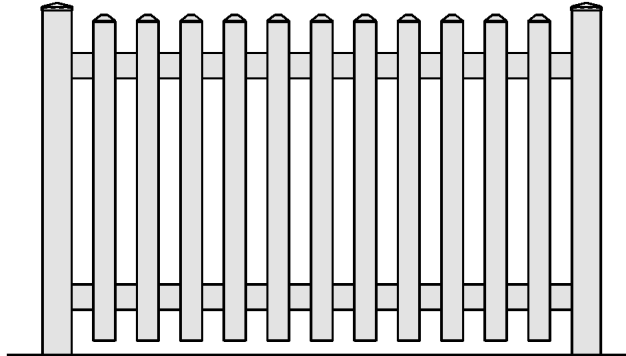

4' Picket Fence

Typical Installation Procedures

Homescape Fence



Step 1 - Dig holes a minimum of 24" in depth and at least 10" in diameter. Posts should be set at 73" on center and 68 - 69" in-between (post to Post).

Step 2 -Insert bottom rail into post. Rails are notched to allow them to "snap" into the posts.

Step 3 - Cement posts in ground. Cement around outside of post and fill inside with concrete to 12" above grade for additional strength. Plumb posts before cement sets/hardens. Make sure you have 68" to 69" in between the posts.

Step 4 - If installing a "face-mounted" picket style, attach pickets to the top and bottom rails by snapping the nylon clips into the provided holes on the rails and pickets. If installing a routed-through picket style, slide pickets into holes on rails. Then secure into post by snapping notched rails into post.

Step 5 -Glue the picket caps onto the pickets.

Step 6 - Glue the caps onto the posts using a PVC glue which is UV rated and classified as a hot glue.

Step 8 - Clean off all cement splatters when finished with a mild detergent and hose down with clean tap water.

Note:

(1) The bottom of the pickets are normally located 1-2" above the ground. They may, however, be placed directly on the ground.