


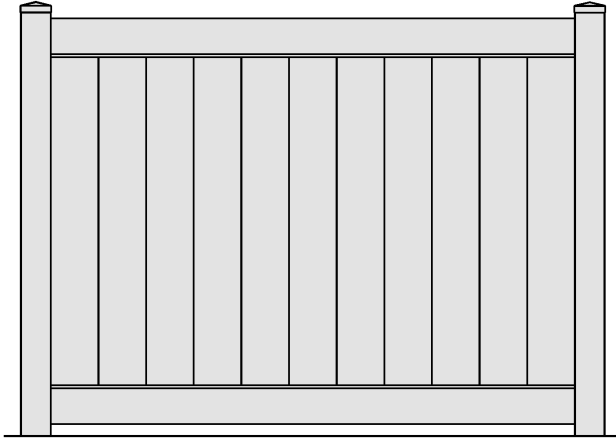

5' and 6' PRIVACY FENCE

Typical Installation Procedures

Homescape Fence



Step 1 - Dig holes a minimum of 24" in depth and at least 10" in diameter. Posts should be set at 93" on center and 88" in-between (Post to Post). (69" on center for 6' wide versions)

Step 2 - Insert bottom rail into post. Rails are notched to allow them to "snap" into the posts.

Step 3 - Cement posts in ground. Cement around outside of post and fill inside with concrete to 12" above grade for additional strength. Plumb posts before cement sets/hardens. Make sure you have 88" in between the posts (64" for 6' wide version). Use the u-channel provided on both posts to cover any gap.

Step 4 - Insert pickets into bottom rail and slide them against the post. Cut the tongue off of the last picket for a clean appearance.

Step 5 - Slide top rail over last picket at an angle, and into post. Lower the rail onto the remaining pickets and slide back into the opposite post.

Step 6 - Glue the caps onto the posts using a PVC glue which is UV rated and classified as a hot glue.

Step 7 - Clean off all cement splatters when finished with a mild detergent and hose down with clean tap water.

Note:

(1) Bottom rail is normally located 1-2" above the ground. It may, however, be placed directly on the ground.

(2) Every other picket will be notched with a 1/4" notching tool which allows the picket to be suspended from the top rail. This method dramatically increases the wind load and strength capacity of the fence.