


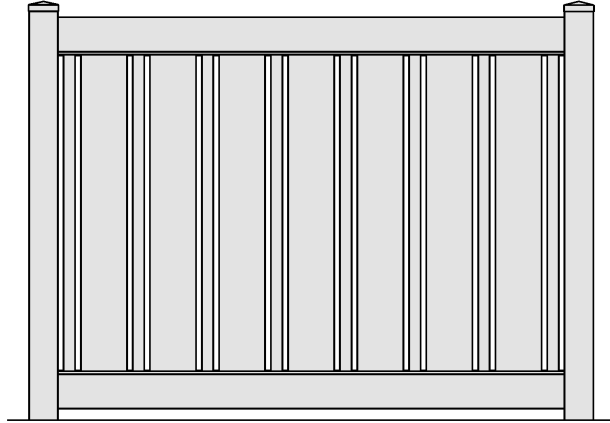

6' Semi-Privacy Fence

Typical Installation Procedures

Homescape Fence



Step 1 - Dig holes a minimum of 24" in depth and at least 10" in diameter. Posts should be set at 87" on center and 82" in-between (Post to Post). (69" on center for 6' wide versions).

Step 2 - Insert bottom rail into post. Rails are notched to allow them to "snap" into the posts.

Step 3 - Cement posts in ground. Cement around outside of post and fill inside with concrete to 12" above grade for additional strength. Plumb posts before cement sets/hardens. Make sure you have 82" in between the posts (64" for 6' wide version).

Step 4 - Insert pickets into bottom rail starting with a 8" picket and slide against post. The pattern for this style is 8" board, 1" spacer, 8" board, 1" spacer and so on until all pickets are installed.

Step 5 - Slide top rail over last picket at an angle, and into post. Lower the rail onto the remaining pickets and insert spacers as in step 4. Slide back into the opposite post.

Step 6 - Glue the caps onto the posts using a PVC glue which is UV rated and classified as a hot glue.

Step 7 - Clean off all cement splatters when finished with a mild detergent and hose down with clean tap water.

Note:

(1) Bottom rail is normally located 1-2" above the ground. It may, however, be placed directly on the ground.

(2) Every other picket will be notched using a 1/4" notching tool which allows the picket to be suspended from the top rail. This method dramatically increases the wind load and strength capacity of the fence